

## Manual: Replacement of Trionic Walker Backrest Strap



1 Unscrew the screw that holds the strap with a 3mm allen key.

Repeat on the opposite side.



2 Make sure that you recover the screw, the nut and the tubular spacer.





## Manual: Replacement of Trionic Walker Backrest Strap



5 Insert the new replacement strap into the padding.

**IMPORTANT:** Make sure to align the end of the strap with the TRIONIC logo as shown in the photo.



6 Insert the tubular spacer into the hole at the end of the strap.